

UNDER DESK CABLE BASKET TRAY – ASSEMBLY INSTRUCTIONS



BOX CONTENTS:

- **1X BASKET TRAY (SIZE: 400MM – 3000MM)**
- **2X ANGLED BRACKETS**
(3X ANGLED BRACKETS FOR BASKET TRAY SIZE: 2100MM – 3000MM)
- **2X HOLD DOWN BRACKETS / CENTRAL CLAMPING PLATES**
(3X FOR BASKET TRAY SIZE: 2100MM – 3000MM)
- **2X NUTS & BOLTS**
(3X NUTS & BOLTS FOR BASKET TRAY SIZE: 2100MM – 3000MM)
- **8X M6 PAN HEAD SCREWS (SELF-TAPPING)**
(12X FOR BASKET TRAY SIZE: 2100MM – 3000MM)



INSTALLATION INSTRUCTIONS:

Step 1: Position the Brackets determine the optimal placement for the Angled Brackets under your desk.

Alternative Option: The tray can also be mounted to a vertical modesty panel.

Align each bracket evenly to the underside of the desk for maximum support.

Step 2: Secure the Brackets


Using the M6 Pan Head Screws, fasten each Angled Bracket securely. Ensure the brackets are firmly attached before moving to the next step.

Step 3: Attach the Basket Tray

Position the Basket Tray onto the installed Angled Brackets. Ensure the tray sits securely within the bracket structure.

Step 4: Secure the Tray

Place the Hold Down Brackets over the Basket Tray. Insert the Nuts & Bolts through the Hold Down Brackets and into the Angled Brackets. Tighten securely to lock the tray into place.

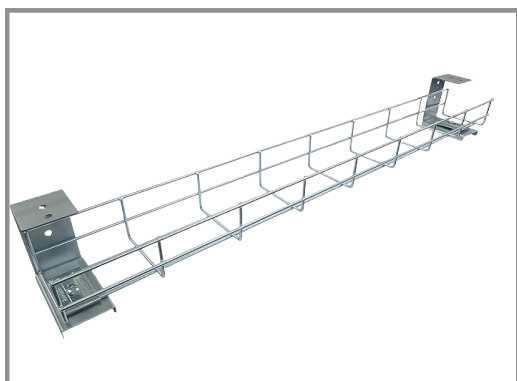

FINAL CHECKS: ✓

- ✓ ENSURE ALL SCREWS AND BOLTS ARE TIGHTLY SECURED.
- ✓ VERIFY THAT THE TRAY IS STABLE AND PROPERLY ALIGNED.
- ✓ ROUTE CABLES NEATLY INTO THE BASKET FOR AN ORGANIZED WORKSPACE.